


Fig. 13

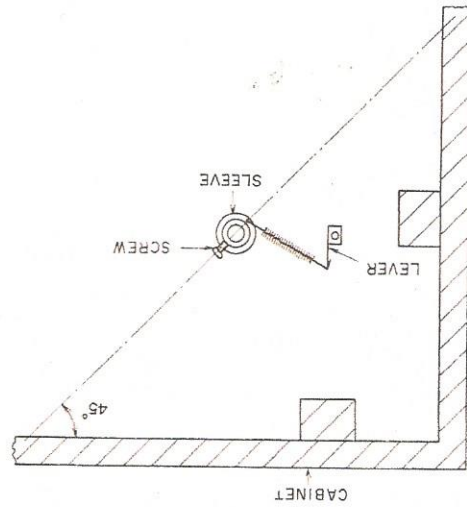

4. PU PLATE ADJUSTMENT (Refer to Fig. 12)
- 1) Put the tone arm in the "stop" state.
 - 2) Loosen the screws (b) and (c).
 - 3) Adjust the PU plate (A) so that it may actuate the microswitch to turn on or off properly.
 - 4) Tighten the screws (b) and (c).
 - 5) Temporarily set the screw (a) in a half screwed position.

3. SLEEVE POSITION ADJUSTMENT (Refer to Fig. 13)
- The sleeve position adjusts antiskating feature.
- 1) Put the tone arm in the "stop" state, or on the arm rest.
 - 2) Set the sleeve, located between the PU Plate and the chassis, to approximately 45° position as shown in Fig. 13.

Fig. 12

